User's Manual

Tablet PC Prestigio MultiPad PMP 5080C Pro

In the online store Winauto you also can buy Tablet Prestigio MultiPad PMP 5080C Pro. Delivery in Kyiv and throughout Ukraine with payment upon receipt!

winauto.ua

Sale - Car receivers - Facia Plates - Head Units - Car TVs and Monitors - Antennas - Car Audio - DVR - GPS Navigation - Trip Computers - Car Alarm Systems - Mechanical Locking - Parking Systems - Car Cameras - Xenon and Lights - Established Optics - Tuning - Car Heating and Cooling - Sound Marine and Electronics - Car Accessories - Isolation - Installation Components - Batteries, Power - Oils and Fluids -

Интернет-магазин автозвука и автотоваров Винавто

EN

1. Packing List

1. Prestigio MultiPad
2. AC Adapter
3. Carrying Case
4. USB Cable
5. Quick Start Guide
6. Warranty Card
7. Legal and Safety Notices

2. Device Overview

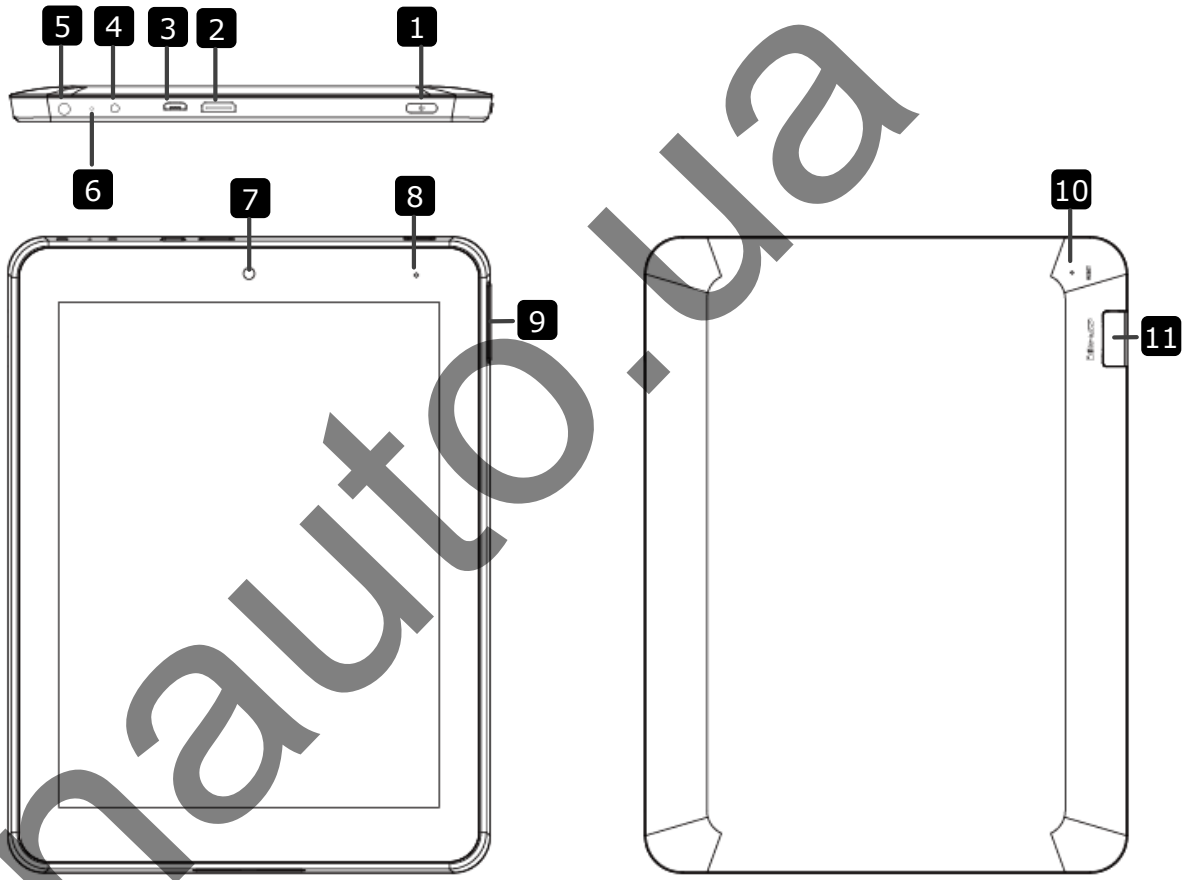

1	**Power**	Turn on/off the device; Suspend/Activate the device
2	**Mini-HDMI video output**	HDMI cable connection.
3	**USB port**	USB connection.
4	**DC Port**	AC adapter connection.
5	**Earphone Jack**	Earphones connection.
6	**Built-in Microphone**	Record sounds.
7	**Camera**	Take photos

winauto.ua

Интернет-магазин автозвука и автотоваров Винавто

EN

8	**Charging indicator**	Glows with red while charging, and with green when fully charged.
9	**Vol +\ Vol - Button**	Adjust the volume level
10	**Reset**	Reset the device in case of malfunctioning.
11	**Micro SD card slot**	Insert the Micro SD card

Getting Started

3. Charging

- Insert the AC connector to the DC port on the device and connect the power adapter to the wall socket for charging.
- Normally it takes approximately 4 hours to fully charge the device. Operating the device while charging with the AC adapter may extend the time of full charging.

4. Power on/Power off

- Press and hold the **Power Button** to turn on the device. It will automatically enter the **Home** screen after the several start-up steps.
- Press the **Power Button** once to enter sleep mode and press it again to awake the device.
- Press and hold the **Power Button,** and then tap on **Power off**/**Standby** to power off the device.

5. Inserting a Memory Card

- The device supports micro SD/SDHC cards.
- To insert a Micro SD card, place the card connector towards the front side of the device and the printing side of the card towards the rear side of the device.
- To remove the micro SD card, gently press the edge of the card to release the safety lock and pull the card out of the slot.
- To access the files on the memory card, select **File** icon and tap on **SD Card**.

Notice:

When you are reading the file from micro SD card, please don't

vinauto.ua

Интернет-магазин автозвука и автотоваров Винавто

EN

remove it, or the device could fail to operate correctly.

Home screen

6. Home screen bars

- Your device has the capacitive sensitive screen. It is operated by touching the screen surface with your finger.

Status bar

The status bar displays the time, battery status, WiFi connection and various notifications.

winauto.ua

Интернет-магазин автозвука и автотоваров Винавто

EN

Time and WiFi area	Displays the current time. Connected to a WiFi network.
Battery status	Displays the battery power or charging progress.

Buttons panel

Back	Return to the previous screen
Home	Return to the home screen
Recent apps	Recently opened applications

Applications drawer

Pressing the button opens the list of all applications, folders and shortcuts on the device.

Quick access menu

Quick access to WiFi and Bluetooth settings, brightness etc.

7. Prestigio home screen

- Prestigio home screen allows to adjust it according to the user's preferences.
- Prestigio home screen is made up of five individual screens. Each room fits the physical display border and can be set to have its own shortcuts and widgets. You can move around the home screen in the following way:

Flick the Home screen horizontally until the desired room is displayed.

- All the space of the side screens can be used for installing applications, widgets and shortcuts.
- The home screen shortcuts are either direct shortcuts (by touching them you are directed straight to the application), or have second-level menus with a number of applications. You can add or

winauto.ua

Интернет-магазин автозвука и автотоваров Винавто

remove any applications.

- For optimal viewing experience, the screen orientation changes automatically to portrait or landscape depending on how you hold the device.
- Downloaded applications may not support automatic screen orientation to portrait or landscape.
- To modify the default behavior, open the orientation settings by touching **Settings** → **Display**→**Auto-rotate screen**. Check the box to allow automatic screen orientation or uncheck it to block it.

8. Customizing the home screen

To move an item to the home screen:

- Touch the button, choose the desired item, touch it and hold, until the home screen appears. Choose the desired shortcut on the home screen (or a desired location on the side screen), and release the item.

To change wallpapers:

- Touch and hold on the free area on the screen, then touch **Wallpaper**, and choose the wallpaper you wish to add from the list.

To move an item:

- Touch and hold the item you want to reposition until it magnifies and becomes movable.
- With your finger remaining in contact with the item on the screen, drag the item to another location on the screen.
- Release the item in the desired location.

To remove an item:

- Touch and hold an item such as a widget, shortcut, or folder that you want to remove, until it magnifies and becomes movable.
- Drag the item onto the top of the delete icon, and when the item becomes red release it.

vinauto.ua

Интернет-магазин автозвука и автотоваров Винавто

EN

9. On-screen Google search bar

- You can access the Google Search tool directly from home screen by tapping anywhere on the Google search bar.

Note:
Please, make sure your device is connected to the Internet.

winavto.ua

Интернет-магазин автозвука и автотоваров Винавто

Keyboard controls for inserting text:

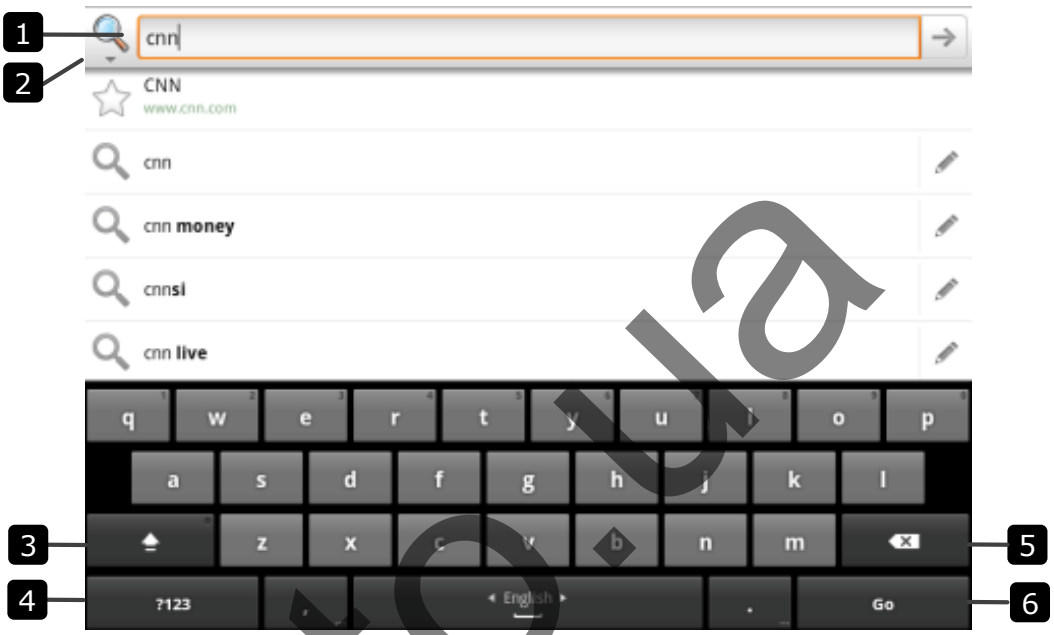

1
- Touch to type letters into the field where the cursor appears.
- Based on the letters being typed, the keyboard shows suggested words under the bar, the most probable one highlighted in color.
- You can touch a suggested word to enter it into the text field.

2
- Touch to select the search area. By selecting **All** the device will search all available sources. By selecting **Web** the device will search the key word only in Internet. By selecting **Apps** the device will search the key word in your applications only.
- After having typed at least one letter in the search bar, touch and hold to open the **Edit text** window. Various editing options are available. You can select parts of text or all text, change the input method or add the typed text to the dictionary. After selecting the text touch it and hold to display the **Cut/Copy** pop-up box.

3
- Touch once to show the uppercase keyboard for typing a capital letter.
- Touch twice to enable the Caps Lock mode.
- Touch to change back to the lowercase keyboard.

4
- Touch to show the keyboard for typing numbers, punctuation marks, and symbols other than the period.

winauto.ua

Интернет-магазин автозвука и автотоваров Винавто

EN

- Touch to switch back to the alphabet keyboard.
- 5 Touch to delete a typed character, symbol, or a space.
- 6 Touch to search the input word.

If you need to type an accented letter, touch the letter and hold it, until the accented letters appear.

10. Keyboard settings

- Touch the **Settings →Language & input→ Android keyboard**.
- To enable a setting, touch the setting option to select the check box ; to disable a setting, touch the setting option to clear the check box .

Available keyboard settings:

Spelling correction	Automatic correction of the input words.
Personal dictionary	The list of user added words.
Keyboard and input methods	Select the input language.
Pointer speed	Select the pointer speed.

Creating personal dictionary:
The keyboard uses the default dictionary to display suggested words as you type. You can create a personal dictionary to include words not found in the main dictionary. The keyboard will also use the words that are added to your personal dictionary to make word suggestions.

To add a word to the dictionary:

- Touch the **Settings → Language & input→Personal dictionary→Add.**
- Type a desired word into the **Add to dictionary** text field.
- Touch **OK**.

winauto.ua

Интернет-магазин автозвука и автотоваров Винавто

To edit a word in the dictionary:

- Touch the **Settings → Language & input→Personal dictionary.**
- Touch a desired word.
- Edit the spelling of the word in the **Edit word** text field.
- Touch **OK**.

To delete a word from the dictionary:

- Touch the **Settings → Language & input→Personal dictionary.**
- Touch a desired word and press the red cross next to it.

12. Settings

To check storage spaces:

Touch **Settings →Storage**. The screen displays the total and available space on the device and on the micro SD card.

To erase unwanted application data and to free storage space:

- Touch **Settings →Apps**.
- From the applications list, touch the application whose cache or data you want to remove.
- In the Application info screen, touch **Clear data** to erase unwanted application data; touch **Clear cache** to erase unwanted cache.
- Touch **Uninstall** to delete the application completely.

To format the microSD card:

- Touch **Settings → Storage**.
- Touch **Erase DS Card**.

CAUTION:

Formatting a microSD card erases all data and downloaded applications, stored on it. Ensure that you back up the data that you need before formatting your microSD card.

vinauto.ua

Интернет-магазин автозвука и автотоваров Винавто

EN

Connecting to Internet

13. Connecting to WiFi

- Touch **Settings** → **Wireless & networks**.
- If the WiFi is off, tap on the Wi-Fi line to turn it on. Then select the **Wi-Fi settings**.
- The device will scan for available WiFi networks and display them at the bottom of the screen.
- Tap on the network you want to connect to. Then tap inside the Wireless password field to make the virtual keyboard appear. Enter the required network information, tap on **Done**, and then tap on **Connect**.

Your device will now attempt to establish a connection to the WiFi access point with the network parameters you entered.

14. Browsing the Web

- Choose **Browser**.
- In the upper part of the screen the URL of the current page will be displayed.
- To input the address, press the address bar and input the symbols.
- During the input the system will suggest possible versions.
- The following symbols are displayed next to the address:

Bookmark	Adding a bookmark
Search	Network search
History	The list of visited websites and bookmarks

- To stop downloading a page, press **X** on the left from the address bar.
- The symbol **X** is displayed only during page download.

Navigation on a web page

Flick your finger horizontally or vertically on the screen to scroll and view desired areas of a web page.

winauto.ua

Интернет-магазин автозвука и автотоваров Винавто

Zoom in/out a web page

Move two fingers apart on the screen to zoom in. Move two fingers close together on the screen to zoom out.

To view the next or previous page:

Touch the **Back button** to view the previous page.
Touch the **Forward button** to view the next page.

To open a new window:

Touch the **+ button**. A new browser window opens and leads you to the home page.

To switch between browser windows:

You can open multiple browser windows to easily switch from one web page to another.

To find text within a web page:

- When viewing a web page, touch the **Menu button** →**Find on page**.
- Type the search item into the search bar.
- Touch the left or right arrow to go to the previous or next matching item.
-

To copy text on a web page:

You can copy and paste text from a web page to your e-mail or text.

- Position your finger at the start of the text you want to copy and then drag to the end of the text you want to copy. The copied text is highlighted in blue.
- Release your finger from the screen.
- To paste text on an e-mail or text, touch **Paste**.

winauto.ua

Интернет-магазин автозвука и автотоваров Винавто

EN

15. Using Web Links and History

To select a link on a web page:

- Move to a link you want on a web page. Touch the link to open the web page.
- Touch and hold the link to open a pop-up menu that allows you to share or copy it to the clipboard.

16. Managing Bookmarks

To bookmark a web page:

- Select the web page you want to bookmark.
- Touch ★. The Bookmarks window opens.
- Enter the bookmark name or edit the web address as needed.
- Touch **OK** to save the web page as a bookmark.

To open a bookmark:

- Touch . The Bookmarks window opens.
- Touch the bookmark to open it in the same browser window.

Settings

17. Display settings

- Touch the **Settings→Display**.
- To enable a setting, touch the setting option to select the check box ; to disable a setting, touch the setting option to clear the check box .
- The following display settings are available:

winauto.ua

Интернет-магазин автозвука и автотоваров Винавто

EN

Brightness	Drag the brightness slider horizontally or touch the desired portion of it to increase or decrease the yellow bar. The longer the yellow bar is to the right, the brighter the screen. Touch **OK** to confirm adjustment.
Wallpaper	Select the desktop wallpaper.
Auto-rotate screen	By default, the screen will switch the orientation to landscape or portrait as you rotate the device.
Sleep	Screen timeout period.
Font size	Select the font size for all main interfaces.

18. Sound settings

- Touch **Settings→Sound**.
- To enable a setting, touch the setting option to select the check box ; to disable a setting, touch the setting option to clear the check box .
- The following sound settings are available:

Volumes	Adjust the volume level
Ringtone & notifications	Select the sound of ringtone and notifications
Touch sounds	The device plays sound when making screen selection.
Screen lock sounds	The device plays sound when locking and unlocking the screen.

19. Language settings

Set the language of the display text.

- Touch the **Settings→Language & input→ Language**.

winauto.ua

Интернет-магазин автозвука и автотоваров Винавто

EN

- Select a language of your choice from the list that appears.

Transferring content

20. Transferring content from PC

- Connect the device to the PC with the USB cable provided. The device will automatically enter the USB screen. Please, follow the on-screen instructions to enable USB data transfer.
- The device will be automatically recognized by the PC. Please, transfer the necessary content using **Windows Explorer**.

21. Downloading applications

- The device offers 2 ways of downloading applications – from a web-site or from a PC.

Allow downloading web applications:
Applications downloaded from the web can be harmful. To protect your device and personal data, download applications only from trusted sources such as Android Market.

To download web applications from a web-site, perform the following operations.

- Touch the **Settings→Security**.
- Touch **Unknown sources** to select the check box.
- When the **Attention** dialog box opens, touch **OK**.
- On the browser screen, touch the application you want to download.
- The application details screen opens.

To install the application, select either **Install** if item is free or **Buy** if it requires purchase.

To download web applications from your PC, perform the following operations.

- Connect the device to your PC via the USB-cable provided.
- Copy the application to the device root catalogue.
- Disconnect the device from your PC.
- Go to **File Explorer** to find the downloaded application.

winauto.ua

Интернет-магазин автозвука и автотоваров Винавто

EN

- Touch the application. The application details screen opens.
- To install the application, select **Install**.

22. Downloading content from Android market

- You can download free or paid applications directly from your device using the **Android market** application marketplace.
- Before entering the **Android market** make sure the **WiFi connection** is established.
- With Internet connection established, enter the **Android Market**.
- Upon entering the **Android market** you can view the list of free and purchasable applications as well as install the preferred applications.

23. Email

You can create and exchange e-mail accounts from web-based e-mail services on your device. Also you can directly access your Gmail account.

- Touch **Email**.

Setting up an email account:

- Type the e-mail address and password of the e-mail account you want to add and then touch **Next**.

Note:
If the e-mail account you want to set up is not in the device e-mail database, you will be asked to manually enter the e-mail account settings, including the e-mail server, protocol, and so on after touching **Next**.

- Enter the name for the account and the name you want displayed in outgoing e-mails and then touch **Done**.
- After creating one e-mail account, touch Add account if you need to create another e-mail account.

24. Files

- You can access all files and folders on the device by touching **File Explorer**.

winauto.ua

Интернет-магазин автозвука и автотоваров Винавто

EN

- The list of all folders will be displayed:

Note:
In order to operate with SD Card and USB these devices must be connected.

Technical Specifications

Processor	High performance ARM Cortex A8 at 1 GHz
OS	Android 4.0 (Ice Cream Sandwich)
RAM	1024MB DDR3
Display	8” TFT LCD, Capacitive multitouch
Resolution	800 x 600 pixels
Video playback	AVI（MPEG4,XVID,DIVX3/4/5/6, MS MPEG4 V3) 20*1088pixels/30FPS/38.4Mbps（Max） Audio Codec：MP2/MP3/AC3/AAC/PCM/DTS 3GP/MP4(H.264,H.263,MPEG4,XVID,DIVX3/4/5/6, MS MPEG4 V3) MPEG4,XVID,DIVX3/4/5/6:1920*1088pixels /30FPS/38.4Mbps（Max） H.264: 1920*1088pixels/30FPS/20Mbps（Max） Audio Codec： MP2/MP3/AC3/AAC/PCM RM/RMVB(Real video 8/9)： 1920*1088pixels/30FPS/38.4Mbps（Max） Audio Codec：Cook/AAC FLV(Sorenson Spark) 1920*1088pixels/30FPS/38.4Mbps（Max） Audio Codec：MP3 MKV(H.264,MPEG4,XVID,DIVX3/4/5/6,MS MPEG4 V3): MPEG4,XVID,DIVX3/4/5/6: 1920*1088pixels /30FPS（Max） H.264: 1920*1088pixels/30FPS//57.2Mbps（Max） Audio Codec：MP2/MP3/AC3/AAC/PCM MOV(MPEG4、H.264): MPEG4: 1920*1080/30FPS（Max） H.264: 1920*1080/30FPS（Max） Audio Codec：MP2/MP3/AC-3/AAC

winauto.ua

Интернет-магазин автозвука и автотоваров Винавто

	MPG/DAT/VOB（MPEG1/2） 1920*1088pixels/30FPS/80Mbps(Max) Audio Codec：MP2/MP3
Audio playback	MP3（MPEG1/2/2.5 Audio Layer 1/2/3）：8～48KHZ/8～320Kbps,CBR and VBR WMA（Version 4、4.1、7、8、9）：8～48KHZ/8～320Kbps WAV（MS-ADPCM、IMA-ADPCM、PCM）：8～48KHZ OGG（Q1- Q10）：8～48KHZ FLAC（Compress Level 0-8）：8～48KHZ APE（Version 3.95,3.97,3.98,3.99,normal and fast）：8～48KHZ AAC(ADIF、ATDS Header AAC-LC and AAC-HE)：8～48KHZ
eBook Reader	PDF/Epub/TXT/FB2/PDB/RTF, Optional
Photo viewer	JPEG(Baseline), BMP, GIF (Static), PNG
Interfaces	USB 2.0, Micro SD (micro SDHC compatible), USB Host, HDMI
Storage capacity	8 GB flash memory (5.87 GB are accessible by user), Memory card slot supports micro SDHC card up to 32 GB
Communications	WiFi (802.11 b/g/n)
Battery	5400 mAh Li-Pol battery
Dimensions	203.1*153.4*11.2（mm）(L x W x H)
Weight	510 g

Disclaimer

As the Prestigio products are constantly updated and improved, your device’s software may have a slightly different appearance or modified functionality than presented in this User Manual. We make every effort to ensure that the information and procedures in this user manual are accurate and complete. No liability can and will be accepted for any errors or omissions. Prestigio reserves the right to make any changes without further notice to any products herein.

winauto.ua